



FALL PROTECTION PUSH BEAM TROLLEY

THIS PRODUCT MEETS OR EXCEEDS
ANSI Z359.18-2017 - TYPE A, OSHA
1926 SUBPART M, OSHA 1910, AND
ASME A10.32-2012 STANDARDS FOR
FALL PROTECTION.

⚠ CAUTION

Read operator's manual carefully
before operating this product. Keep
this manual nearby for reference at
all times while operating this product.

**310 LB FALL PROTECTION
FOR COMBINED WEIGHT
(USER, TOOLS, ETC.)**

0.5–1 TON CAPACITY

MODELS:

**OZ05PBTA-MR
OZ1PBTA-MR**



P.O. Box 845, Winona, MN 55987
Phone (800) 749-1064
(507) 474-6250
Tech Support (507) 457-3346
sales@ozliftingproducts.com

TABLE OF CONTENTS:

INTRODUCTION..... 3

 Owner Information..... 3

INFORMATION AND LOCATIONS..... 4

 ID Plate with QR Code Location 4

 Glossary of Fall Protection Terms 5

 Definitions 5

SPECIFICATIONS..... 6

 Wheel & Bail Dimensions 7

PARTS BREAKDOWN 8

SAFETY 9

 General Safety Information 9

 Guidelines 9

 Safety Symbols 9

 Safety Precautions 9

 Safety Warnings 10

 Push Beam Trolley (Personal Fall Protection Usage) 10

 Push Beam Trolley (Material Handling Usage) 10

 Safety Labels..... 11

 Label Identification 11

 Danger Safety Labels 11

 Warning Safety Labels 11

 Caution Safety Labels 11

 Safety Label Locations..... 12

 Cosmetic Label Locations..... 14

PRODUCT APPLICATIONS AND LIMITATIONS 14

 Material Handling Usage..... 15

 Fall Protection Usage..... 15

PRE-INSTALLATION INSPECTION..... 15

INSTALLATION 16

OPERATION 18

 Warnings & Precautions 18

 Operation..... 18

WARRANTY 19

INSPECTION LOG..... 20

INTRODUCTION:

OWNER INFORMATION

Thank you for your decision to purchase the **FALL PROTECTION SERIES PUSH BEAM TROLLEY** by OZ Lifting Products, LLC®. To ensure maximum performance of your equipment, it is mandatory that you thoroughly study this operator's manual and follow the recommendations. Proper operation and maintenance are essential to maximize equipment life and prevent personal injury.

The purpose of this manual is to familiarize and instruct the operator.

Safety is of primary importance to the owner/operator and to the manufacturer. The first section of this manual includes a list of safety messages that, if followed, will help protect the operator and bystanders from injury or death. Many of the safety messages will be repeated throughout the manual. The owner/operator should know these safety messages and be aware of the hazards of operating and maintaining this equipment. Operate and maintain this equipment in a safe manner and in accordance with all applicable local, state, and federal codes, regulations and/or laws. Follow all on product labeling and instructions.

Make sure that all personnel have read this operator's manual and thoroughly understand safe and correct operating, installation and maintenance procedures.

It is the operator's responsibility to ensure that the product is used in accordance with all applicable local codes, regulations, and safety standards. OZ Lifting Products, LLC® assumes no liability for any damages or injuries resulting from the improper use of the product.

NOTE: This product meets or exceeds ANSI Z359.18-2017 - Type A, OSHA 1926 Subpart M, OSHA 1910, and ASME A10.32-2012 standards for fall protection.

OZ Lifting Products, LLC® is continually working to improve its products. OZ Lifting Products, LLC® reserves the right to make any improvements or changes as deemed practical and possible without incurring any responsibility or obligation to make any changes or additions to equipment sold previously.

Although great care has been taken to ensure the accuracy of this publication, OZ Lifting Products, LLC® makes no warranty or guarantee of any kind, written or expressed, implied or otherwise with regard to the information contained within this manual. OZ Lifting Products, LLC® assumes no responsibility for any errors that may appear in this manual and shall not be liable under any circumstances for incidental, consequential or punitive damages in connection with, or arising from the use of this manual.

Keep this manual available for frequent reference. All new operators or owners must review the manual before using the equipment, and annually thereafter. This operator's manual is available on our website www.ozliftingproducts.com in digital and multi-language formats. Contact OZ Lifting Products, LLC® for assistance, information, or for additional copies of this manual.



P.O. Box 845, Winona, MN 55987
Phone (800) 749-1064 • (507) 474-6250
Tech Support (507) 457-3346
sales@ozliftingproducts.com
www.ozliftingproducts.com

INFORMATION AND LOCATIONS:

ID PLATE WITH QR CODE LOCATION

Please record your OZ Lifting Products information in the spaces provided below for future reference.

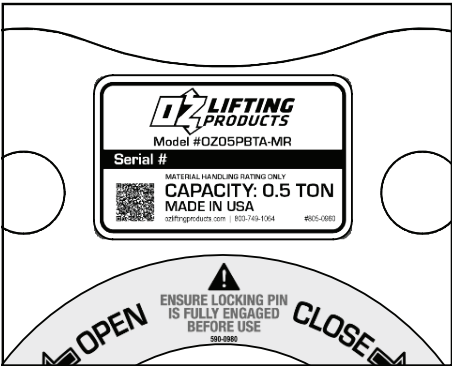


Figure 1.1

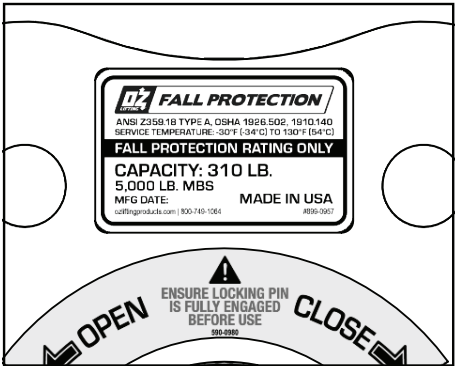


Figure 1.2

BEFORE USE, FILL IN THE INFORMATION BELOW:

Model No.: _____

Serial No.: _____

Purchase Date: _____

Always use the model number and serial number when requesting information or when ordering parts.

Use your mobile device to scan the QR Code. The mobile device will then navigate to the OZ Lifting Products website to view digital and multi-language versions of this manual.

GLOSSARY OF FALL PROTECTION TERMS:

Definitions

NOTE: The following terms and definitions are used in these instructions:

Authorized Person - A person assigned by the employer to perform duties at a location where the person is exposed to a fall hazard.

Competent Person - One who is capable of identifying existing and predictable hazards in the surroundings or working conditions which are unsanitary, hazardous, or dangerous to employees, and who has authorization to take a prompt corrective measures to eliminate them.

Fall Arrest System - A collection of Fall Protection equipment configured to protect the user in the event of a fall.


Qualified Person - The person that—by possession of a recognized degree or certificate of professional standing, or through extensive knowledge, training, and experience—has successfully demonstrated they are able to resolve problems relating to the subject matter and work.

User - A person who performs activities while protected by a Fall Protection system.

Anchorage - The load-bearing structure that supports your fall protection system.

Anchorage Connector - A device that bridges a worker's fall arrest equipment to a primary structural anchorage.

SPECIFICATIONS:

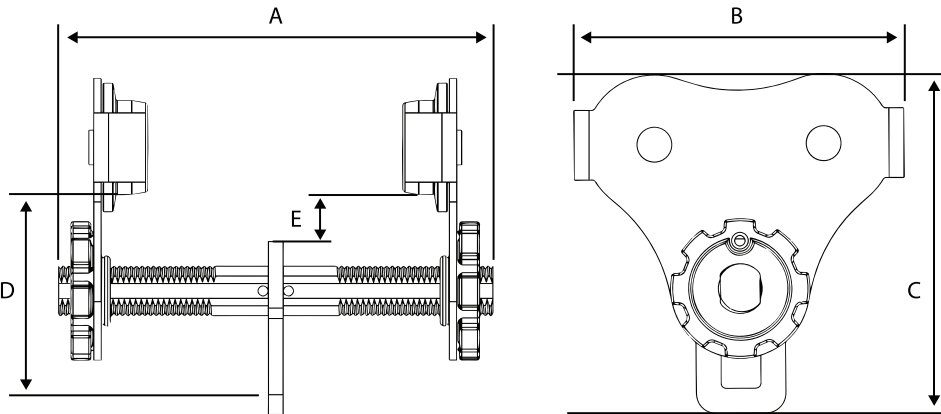


	OZ05PBTA-MR	OZ05PBTA-MR-12	OZ05PBTA-MR-16
Material Handling Load - lb [kg]	1000.00 [453.60]	1000.00 [453.60]	1000.00 [453.60]
Fall Protection* - lb [kg]	310.00 [140.91]	310.00 [140.91]	310.00 [140.91]
Minimum Breaking Strength (MBS) - lb [kg]	5000.00 [2267.96]	5000.00 [2267.96]	5000.00 [2267.96]
Service Temperature Range - °F [°C]	-30 [-34] – 130 [54]	-30 [-34] – 130 [54]	-30 [-34] – 130 [54]
Designation Type per ANSI Z359.18-2017	A	A	A
Adjustable Flange Width - in [mm]	2.50-8.00 [64.00-203.00]	2.50-12.00 [64.00-305.00]	5.00-16.00 [127.00-406.00]
Minimum Radius Curve - ft [m]	2.75 [0.84]	2.75 [0.84]	2.75 [0.84]
A Width - in [mm]	12.52 [318.00]	16.52 [420.00]	20.52 [521.00]
B Depth - in [mm]	8.28 [210.00]	8.28 [210.00]	8.28 [210.00]
C Height - in [mm]	9.00 [229.00]	9.00 [229.00]	9.00 [229.00]
D Headroom - in [mm]	5.44 [138.00]	5.44 [138.00]	5.44 [138.00]
E Flange Thickness - in [mm]	1.25 [32.00]	1.25 [32.00]	1.25 [32.00]
Net Weight - lb [kg]	16.55 [7.51]	17.74 [8.05]	18.95 [8.60]

*Combined weight (user, tools, etc)

	OZ1PBTA-MR	OZ1PBTA-MR-12	OZ1PBTA-MR-16
Material Handling Load - lb [kg]	2000.00 [907.20]	2000.00 [907.20]	2000.00 [907.20]
Fall Protection* - lb [kg]	310.00 [140.91]	310.00 [140.91]	310.00 [140.91]
Minimum Breaking Strength (MBS) - lb [kg]	5000.00 [2267.96]	5000.00 [2267.96]	5000.00 [2267.96]
Service Temperature Range - °F [°C]	-30 [-34] – 130 [54]	-30 [-34] – 130 [54]	-30 [-34] – 130 [54]
Designation Type per ANSI Z359.18-2017	A	A	A
Adjustable Flange Width - in [mm]	2.25-8.00 [57.00-203.00]	2.25-12.00 [57.00-305.00]	5.00-16.00 [127.00-406.00]
Minimum Radius Curve - ft [m]	3.35 [1.02]	3.35 [1.02]	3.35 [1.02]
A Width - in [mm]	12.73 [323.00]	16.73 [425.00]	20.73 [527.00]
B Depth - in [mm]	10.13 [257.00]	10.13 [257.00]	10.13 [257.00]
C Height - in [mm]	9.75 [248.00]	9.75 [248.00]	9.75 [248.00]
D Headroom - in [mm]	5.38 [137.00]	5.38 [137.00]	5.38 [137.00]
E Flange Thickness - in [mm]	1.25 [32.00]	1.25 [32.00]	1.25 [32.00]
Net Weight - lb [kg]	26.00 [11.82]	30.00 [13.64]	31.00 [14.09]

*Combined weight (user, tools, etc)

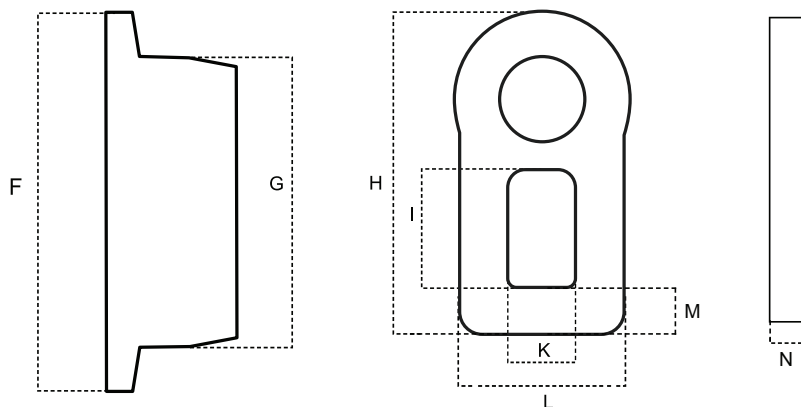


WHEEL & BAIL DIMENSIONS

	OZ05PBTA-MR	OZ05PBTA-MR-12	OZ05PBTA-MR-16
F in [mm]	3.25 [82.55]	3.25 [82.55]	3.25 [82.55]
G in [mm]	2.38 [60.45]	2.38 [60.45]	2.38 [60.45]
H in [mm]	4.65 [118.11]	4.65 [118.11]	4.65 [118.11]
I in [mm]	1.87 [47.50]	1.87 [47.50]	1.87 [47.50]
K in [mm]	1.25 [31.75]	1.25 [31.75]	1.25 [31.75]
L in [mm]	2.50 [63.50]	2.50 [63.50]	2.50 [63.50]
M in [mm]	0.63 [16.00]	0.63 [16.00]	0.63 [16.00]
N in [mm]	0.50 [12.70]	0.50 [12.70]	0.50 [12.70]

	OZ1PBTA-MR	OZ1PBTA-MR-12	OZ1PBTA-MR-16
F in [mm]	4.00 [101.60]	4.00 [101.60]	4.00 [101.60]
G in [mm]	3.00 [76.20]	3.00 [76.20]	3.00 [76.20]
H in [mm]	4.65 [118.11]	4.65 [118.11]	4.65 [118.11]
I in [mm]	1.87 [47.50]	1.87 [47.50]	1.87 [47.50]
K in [mm]	1.25 [31.75]	1.25 [31.75]	1.25 [31.75]
L in [mm]	2.50 [63.50]	2.50 [63.50]	2.50 [63.50]
M in [mm]	0.63 [16.00]	0.63 [16.00]	0.63 [16.00]
N in [mm]	0.50 [12.70]	0.50 [12.70]	0.50 [12.70]

PARTS BREAKDOWN:

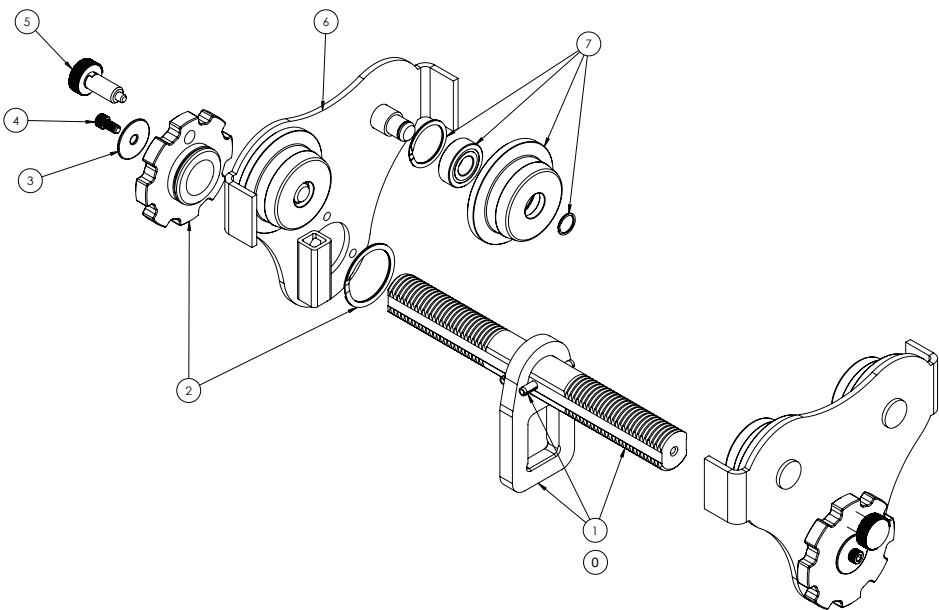

Item No.	Part No.	Description	Quantity	Replacement Part
1	512-0003	8" Load Bar Assembly	1	Yes
	512-0004	12" Load Bar Assembly	1	Yes
	512-0005	16" Load Bar Assembly	1	Yes
2	511-0003	0.5T, Hand Knob Assembly	2	Yes
	512-0003	1T, Hand Knob Assembly	2	Yes
3	440-02500-000	Washer,Ovrszd,Zinc, 0.25X1.25	2	Yes
4	117-02520-050	Bolt,Shcs,SS,Nyln,0.25-20X0.50	2	Yes
5	511-0400	Spring Loaded Locking Pin	2	Yes
6	511-0040	0.5T, Side Plate Assembly	2	No
	512-0040	1T, Side Plate Assembly	2	No
7	511-0004	0.5T, Wheel Assembly	4	Yes
	512-0007	1T, Wheel Assembly	4	Yes
0	805-0090	0.5T, Label Assembly	1	Yes
	806-0090	1T, Label Assembly	1	Yes

SAFETY:

GENERAL SAFETY INFORMATION

Guidelines

This general safety information serves as a guide to correctly operate OZ Lifting Products, LLC® equipment. Anyone operating this equipment must read and understand all of the manuals that are included with the **FALL PROTECTION SERIES PUSH BEAM TROLLEY** by OZ Lifting Products, LLC®.

Safety Symbols

The words DANGER, WARNING, CAUTION are used throughout the safety messages and decals in the manual or on the equipment. Statements with one of these words indicates a safety risk is involved. Be sure to observe the precautions indicated whenever a Safety Alert Symbol is present.



This symbol is used to call attention to instructions concerning personal safety. Be sure to observe and follow these instructions. Take time to be careful!



The signal word **DANGER** on the equipment and in the manual identifies a hazardous situation which, if not avoided, **WILL** result in death or serious injury.



The signal word **WARNING** on the equipment and in the manual indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.



The signal word **CAUTION** on the equipment and in the manual indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices.



This notice identifies procedures which must be followed to avoid damage to the equipment.

SAFETY PRECAUTIONS

The information in this manual applies to the **FALL PROTECTION SERIES PUSH BEAM TROLLEY** by OZ Lifting Products, LLC®.

This manual contains general instructions for normal installation, operation, and maintenance of the product described herein. The information provided should not be expected to prepare the user for all possible circumstances.

This product should not be installed, operated, or maintained by any person who has not read all the contents of this manual. Failure to read and comply with these instructions, warnings, or limitations may result in bodily injury, death, or property damage.

It is the responsibility of the owner/user to install, test, maintain, and operate this product in accordance with OSHA regulations as well as all other federal, state, and local regulations. Only trained and qualified personnel shall operate and maintain this product.

Regularly inspect the **FALL PROTECTION SERIES PUSH BEAM TROLLEY** by OZ Lifting Products, LLC® for signs of wear, elongation of holes, surface cracks, gouges, damage or any abnormal conditions.

Product owners should schedule and keep record of regular inspection and maintenance performed. There is a maintenance chart included in the back of this book. Record your **FALL PROTECTION SERIES PUSH BEAM TROLLEY** by OZ Lifting Products, LLC® serial number and purchase date in this manual for reference.

Do not use the **FALL PROTECTION SERIES PUSH BEAM TROLLEY** by OZ Lifting Products, LLC® in conjunction with other equipment when using as fall protection anchorage unless all equipment is compatible and meets current fall protection regulations and standards. Modifications to this product is only authorized by the original manufacturer.

SAFETY WARNINGS



Failure to read and comply with the following warnings may result in a hazardous situation that could lead to death, serious injury or property damage. Keep this manual near the equipment at all times. Do not remove, alter, or obscure the labels attached to the winch. Contact OZ Lifting Products, LLC® for replacement manuals and labels.

PUSH BEAM TROLLEY (PERSONAL FALL PROTECTION USAGE)

- DO NOT** use any trolley that has not passed inspection by a qualified person.
- DO NOT** alter or misuse equipment.
- DO NOT** use in a non-compliant matter.
- DO NOT** operate in a workspace that has not been assessed for proper use.
- DO NOT** purchase used personal fall arrest systems.
- DO NOT** use non-compliant harnesses and connectors.
- DO NOT** operate without a rescue procedure in place.
- DO NOT** use to hang, lift, support, or to hoist tools or equipment.
- DO NOT** use without records of proper inspection.
- DO NOT** use trolley as an anchor point for more than one personal fall arrest system.

PUSH BEAM TROLLEY (MATERIAL HANDLING USAGE)

- DO NOT** lift more than the designated load rating.
- DO NOT** lift people or lift loads over people.
- DO NOT** operate a damaged or malfunctioning product.
- DO NOT** remove, deface, or cover warning labels.
- DO NOT** operate until personnel are warned and cleared from the area.
- DO NOT** use if load is not suspended vertically.
- DO NOT** use trolley without locking firmly in place.
- DO NOT** use trolley as a welding ground.
- DO NOT** weld on the lifted load.
- DO NOT** open the trolley when it is holding a load.
- DO NOT** use trolley in corrosive environments.
- DO NOT** use connections between the trolley and load.
- DO NOT** allow the load to swing.



Failure to read and comply with these safety warnings may result in a hazardous situation that could lead to death, serious injury, or property damage.


SAFETY LABELS

Label Identification

Safety labels are placed on the equipment to protect anyone working on or around this equipment, as well as the components of the equipment. All personnel operating or maintaining this equipment must familiarize themselves with the safety labels.

The safety labels are color coded to warn the operator of the various levels of machine hazards. The safety label example below defines a standard industry label.

Make sure all safety labels are in place and clearly readable. Replace any damaged or missing safety labels with a factory replacement label.

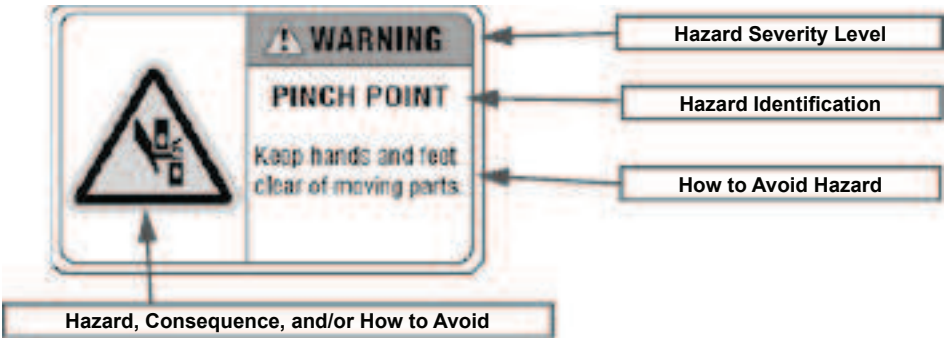

Danger Safety Labels



Failure to read and comply with the following warnings may result in a hazardous situation that could lead to death, serious injury, or property damage.

Warning Safety Labels



The signal word **WARNING** on the equipment and in the manual indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

Caution Safety Labels



The signal word **CAUTION** on the equipment and in the manual indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices.


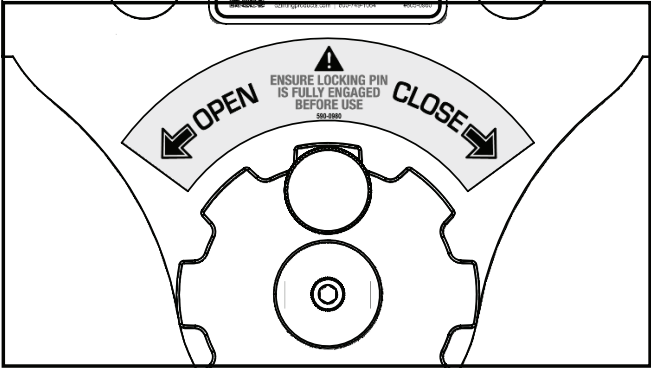


Figure 2.1

 OZXXPBTA-MR-16



OZXXPBTA-MR-12



OZXXPBTA-MR

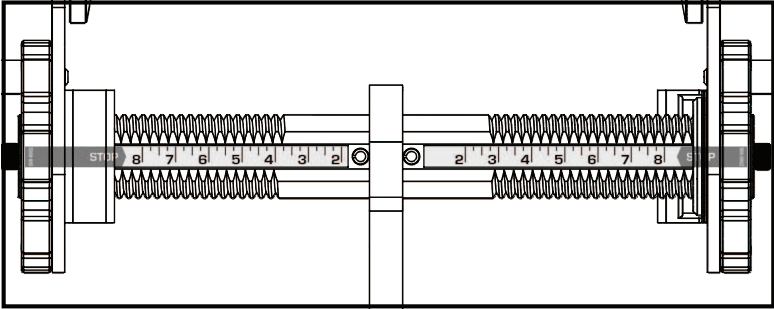


Figure 2.2

OZXXPBTA-MR-16



OZXXPBTA-MR-12



OZXXPBTA-MR

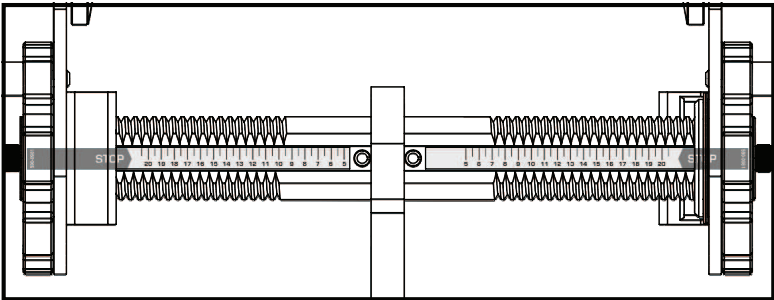


Figure 2.3

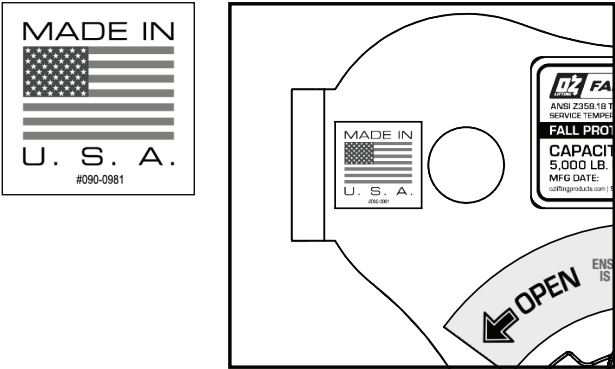


Figure 2.4

PRODUCT APPLICATIONS AND LIMITATIONS:

This **FALL PROTECTION SERIES PUSH BEAM TROLLEY** by OZ Lifting Products, LLC® may be used to support one personal fall arrest system. Any structure upon which this trolley is installed must be able to withstand loads of at least 5,000 lbs [2267.96 kg] in any direction fall arrest may occur. This trolley is designed to withstand vertical fall arresting forces. Users should try to remain in line with the trolley as much as possible. Every precaution must be taken to avoid swing falls. These can cause dangerous situations that could overcome the personal fall arrest system and may cause serious injury.

⚠ WARNING

The **FALL PROTECTION SERIES PUSH BEAM TROLLEY** by OZ Lifting Products, LLC® is used as part of a complete Fall Protection system. All users must be fully trained in the safe installation and operation of their complete Fall Protection system. Misuse of this product could result in serious injury or death. For proper selection, operation, installation, maintenance, and service, refer to all instruction manuals and manufacturer recommendations. For more information see your supervisor or contact OZ Lifting Products, LLC®.

⚠ WARNING

The **FALL PROTECTION SERIES PUSH BEAM TROLLEY** by OZ Lifting Products, LLC® is used as part of a complete Fall Protection system. Use in any other applications including, but not limited to, non-approved material handling, recreation or sport-related activities, or other activities not described in these instructions, is not approved by OZ Lifting Products, LLC® and could result in serious injury or death. This product is only to be used by trained users in workplace applications.

⚠ CAUTION

ANSI/ASSE Z359.7 standard does not apply to the anchorage that the connector is attached to.

IMPORTANT

Ensure that Fall Protection systems that are assembled from components made by different manufacturers are compatible and meet all applicable Fall Protection regulations, standards, or requirements. Always consult a Competent or Qualified Person before using these systems.

IMPORTANT

The **FALL PROTECTION SERIES PUSH BEAM TROLLEY** by OZ Lifting Products, LLC® anchorage connectors have been tested according to the ANSI/ASSE Z359.18 and in compliance with the requirements of ANSI/ASSE Z359.7.

Prior to use, confirm that there is sufficient clearance below the anchorage connector to arrest a fall before the user strikes the ground or an obstruction. Start all fall clearance calculations from the anchor point on the trolley, not the beam itself, as this distance may change due to different beam width.

MATERIAL HANDLING USAGE

Any usage of the trolley for material handling purposes must be treated in the same way as a fall arrest. After any type of material handling usage, the trolley must be removed from service and pass an inspection by a qualified person prior to returning it to service as part of a personal fall arrest system.

FALL PROTECTION USAGE

In the event of the trolley being subjected to a fall arrest, it must be taken out of service and pass an inspection by a qualified person before it can be returned to service.

When attaching personal fall arrest system components to fall protection series trolley:

- Ensure all connectors are fully closed and locked.
- Ensure the connector is not designed/oriented in such a way as to cause excess load to be applied to the gate of the connector.
- Avoid any situation that could cause the connector to open unexpectedly, including roll-out.
- DO NOT use improper connectors or misuse proper connectors as this could cause serious damage.

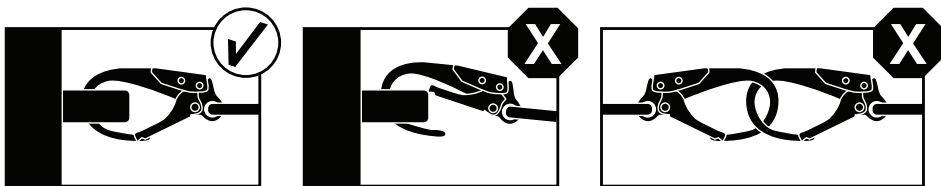


Figure 3.1

PRE-INSTALLATION INSPECTION:

In order to maintain quality operation of the product, a regular inspection schedule should be followed by each operator. All inspections should be reported and maintained in a dated record log located at the end of this manual. You will notice that the first entry has been made as the trolley passed an inspection prior to leaving OZ Lifting Products, LLC® headquarters. These records should be available to all personnel involved with the product and should be made available to OZ Lifting Products, LLC® when a warranty issue is in question.

Authorized person or operator shall inspect the trolley before each use. Each **FALL PROTECTION SERIES PUSH BEAM TROLLEY** by OZ Lifting Products, LLC® must pass an inspection by a qualified person every six months to remain in service. Inspect for wear, damage, cuts, cracks, corrosion, impact damage, pits, burrs, rough surfaces, sharp edges, rust, paint build-up, excessive heating, alteration, and missing or illegible labels. During an inspection, also test that the **FALL PROTECTION SERIES PUSH BEAM TROLLEY** by OZ Lifting Products, LLC® functions smoothly and that the spindle threads are in good condition. If any problems are observed, the **FALL PROTECTION SERIES PUSH BEAM TROLLEY** by OZ Lifting Products, LLC® should be placed out of service until it can be repaired. Use only OZ Lifting Products, LLC® for replacement parts. The **FALL PROTECTION SERIES PUSH BEAM TROLLEY** by OZ Lifting Products, LLC® should be inspected annually by a competent or qualified person other than the user.

CAUTION

ANSI/ASSE Z359.7 standard does not apply to the anchorage that the connector is attached to.

INSTALLATION:

Check for damage during shipment prior to installation. Do not install or use a damaged product. Be sure to maintain records of all accompanying product information. Contact your local OZ Lifting Products, LLC® dealer if there are any problems or questions. Read and comply with all instructions and warnings furnished with or attached to the product as applicable.

WARNING

Ensure that lock pins are fully seated and locked in place prior to operation.

WARNING

Beam trolley operators should read and fully comprehend this entire manual and all warnings on the trolley before use. If this manual is not read and followed completely, injuries may occur. Proper use of this beam trolley is only part of the safe operation of your personal fall arrest system. Ensure that all components of your personal fall arrest are being used correctly and are in good condition.

CAUTION

ANSI/ASSE Z359.7 standard does not apply to the anchorage that the connector is attached to.

IMPORTANT

All persons **MUST** be trained in proper operation and in dealing with potential malfunctions of personal fall arrest systems. Abstain from use of alcohol, medication, or drugs while operating. Avoid operations while tired or distracted. Avoid operation if they have a history of seizures or other medical issues that may interfere with operation.

IMPORTANT

Maintain a 1/8 inch gap between the flange of each wheel and the beam to ensure smooth operation.

NOTE: Prior to operation ensure that the **FALL PROTECTION SERIES PUSH BEAM TROLLEY** by OZ Lifting Products, LLC® is in proper working condition and maintenance records are up to date. Please refer to the manual for your fall protection device for proper operation.

1. Prior to installation, measure the width of the beam flange.

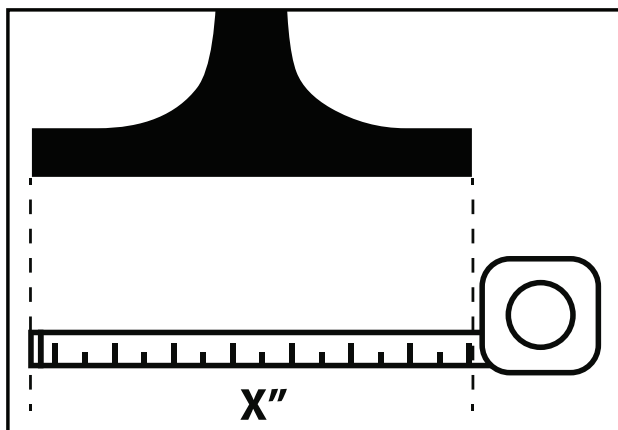


Figure 4.1

2. Locate the locking pin and adjustment knob on both sides of the trolley.

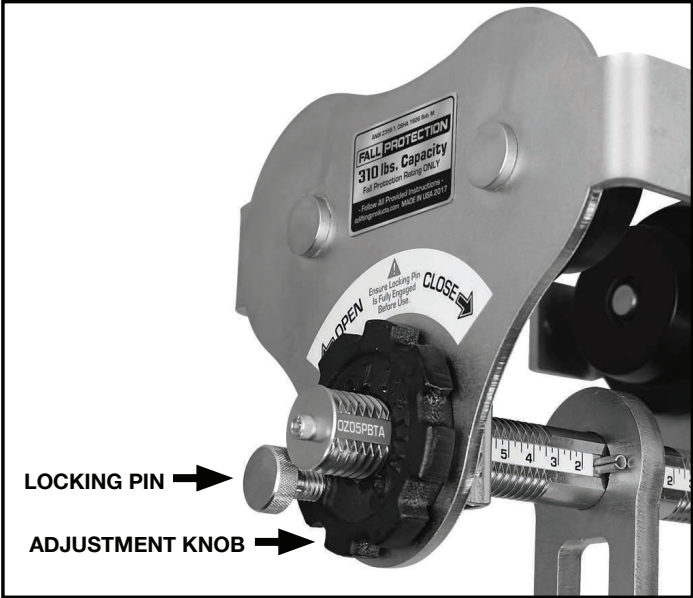


Figure 4.2

NOTE: To adjust trolley width, pull the spring-loaded locking pin and twist 90 degrees. This position allows the adjustment knob to spin freely. To lock the trolley width, twist locking pin an additional 90 degrees until it clicks and seats into place. Then spin the adjustment knob counterclockwise to the nearest locking position. See Figure 4.3

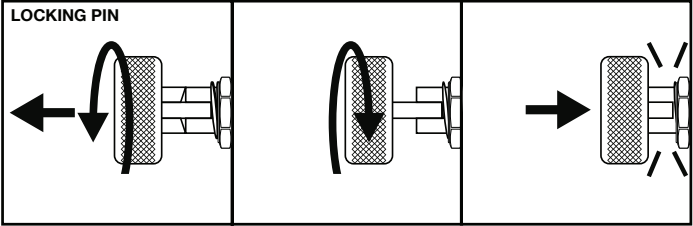


Figure 4.3

3. Adjust one side of the trolley to the desired flange width (e.g. if the beam measures 6 inches, set one side of the trolley to 6 inches on the ruler guide). Open the opposite side of the trolley so that it fits over the beam flange.

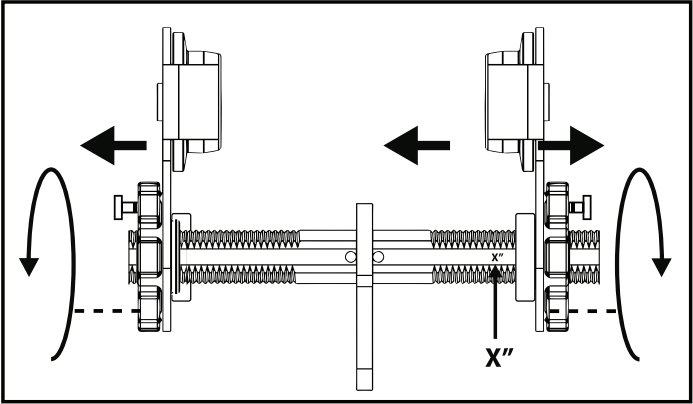


Figure 4.4

4. Once the trolley is over the beam flange, turn the adjustment knob on the second side to match the desired flange width (e.g. if the beam measures 6 inches, both sides of the trolley should be set to 6 inches on the ruler guide).

NOTE: Maintain a 1/8 inch gap between the flange of each wheel and the beam to ensure smooth operation.

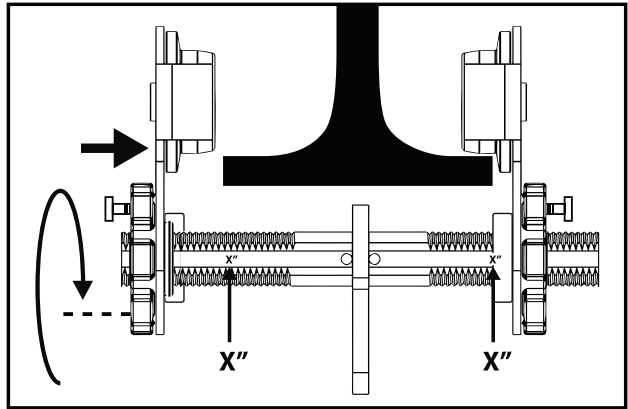


Figure 4.5

5. Removal of the trolley is the reverse of installation.

OPERATION:

WARNINGS & PRECAUTIONS

FALL PROTECTION SERIES PUSH BEAM TROLLEY by OZ Lifting Products, LLC® operators should read and fully comprehend this entire manual and all warnings on the product before beginning operation. If this manual is not read and followed completely, injuries may occur.

All operators **MUST**:

- Be trained in proper trolley operation and in dealing with potential malfunctions.
- Abstain from use of alcohol, medications, or drugs while operating.
- Avoid operating while tired or distracted.
- Avoid operation if they have a history of seizures or other medical issues that may interfere with operation.
- Have proper coordination and vision.

NOTE: Prior to operation, ensure trolley is in proper working condition and maintenance records are up to date.

OPERATION

1. Attach load to suspension bail directly under the trolley.
2. Ensure that the load is centered.
3. Lift slowly and maintain constant observation of the load.

IMPORTANT

Any FALL PROTECTION SERIES PUSH BEAM TROLLEY by OZ Lifting Products, LLC® that has been subject to fall arrest or impact forces must be immediately removed from service.

OZ LIFTING PRODUCTS TEN YEAR WARRANTY:

OZ Lifting Products, LLC® guarantees this product to be free of defects in materials and workmanship for ten years from the date of shipment.

This Warranty Does NOT Cover:

This warranty does not apply to products that show signs of misuse, overloading, alteration, improper maintenance or negligence. The normal wear and tear of moving parts is excluded from the warranty. Moving parts are defined as brake discs, wire rope and other wear components that are subject to use conditions. This warranty does not cover any costs related to removal of this product, lost time, or any other incidental or consequential damages/costs resulting from the claimed defects.

OZ Lifting Products, LLC® does not guarantee that stainless steel will remain free of rust, stains, or corrosion for the lifetime of the product. Environmental conditions, such as proximity to large bodies of water, or regular contact with chloride salts, sulfides, or rusting metals may cause discoloration and staining. As a preventative measure, we recommend proper periodic care.

Warranty Disclaimers/Limitations:

If this product fails during the first ten years of operating due to defective materials or workmanship, it will be repaired or replaced at the discretion of OZ Lifting Products, LLC®.

Any product subject to a warranty claim must be returned, prepaid, to an authorized OZ Lifting Products, LLC® warranty depot along with proof of purchase. Upon repair, the product will be returned to the customer free of charge. If no defect is found, the customer will be responsible for return shipping costs. The product's warranty will be effective for the remainder of the original warranty period (ten years from shipment date).

All OZ Lifting Products, LLC® manual and electric winches are subject to a one year limited warranty.

It is the operator's responsibility to ensure that the product is used in accordance with all applicable local codes, regulations, and safety standards. OZ Lifting Products, LLC® assumes no liability for any damages or injuries resulting from the improper use of the product.

OZ Lifting Products, LLC® will not be held liable for the following arising from the use of this product: injuries to persons or property, death, incidental, consequential, or contingent damages, whether negligent or deliberate. It is the sole responsibility of the owner to install and operate the product properly and safely.

This is OZ Lifting Products, LLC®'s only written warranty. This warranty is in lieu of all other warranties implied by law such as merchantability and fitness. The sale of products from OZ Lifting Products, LLC® under any other warranty or guarantee, expressed or implied, is not authorized.

NOTE: OZ Lifting Products, LLC® has the right to alter the design of or discontinue the production of any product without prior notice.

For more information please contact:



P.O. Box 845, Winona, MN 55987
Phone (800) 749-1064 • (507) 474-6250
Tech Support (507) 457-3346

sales@ozliftingproducts.com • www.ozliftingproducts.com

	Return to Service	(Y/N)	Notes	Inspected by
	Other Concerns	(Y/N)		
	Missing/Illegible Decals	(Y/N)		
	Bail Wear	(Y/N)		
	Bent Side Plate	(Y/N)		
	Spindle Thread Damage	(Y/N)		
	Excessive Corrosion	(Y/N)		
	Excessive Wear	(Y/N)		
	Date	(Y/N)		

		Inspected by		Notes	
Return to Service	(Y/N)				
Other Concerns	(Y/N)				
Missing/Illegible Decals	(Y/N)				
Bail Wear	(Y/N)				
Bent Side Plate	(Y/N)				
Spindle Thread Damage	(Y/N)				
Excessive Corrosion	(Y/N)				
Excessive Wear	(Y/N)				



SCAN FOR ONLINE MANUAL & TRANSLATIONS.
BUSQUE MANUALES Y TRADUCCIONES EN LÍNEA.
RECHERCHER UN MANUEL ET DES TRADUCTIONS EN LIGNE.



P.O. Box 845, Winona, MN 55987
Phone (800) 749-1064 • (507) 474-6250

Tech Support (507) 457-3346
sales@ozliftingproducts.com
www.ozliftingproducts.com

