

OZHB10-SR

HEADACHE BALL FOR SYNTHETIC ROPE INSTALLATION

294-0930 | REV: B

TOOLS NEEDED:


1/2" Socket Wrench x2

HARDWARE:

5/16-18 x 2" Hex Bolt x2

5/16-18 Nylon Locking
Hex Nut x2

5/16 Washer x4

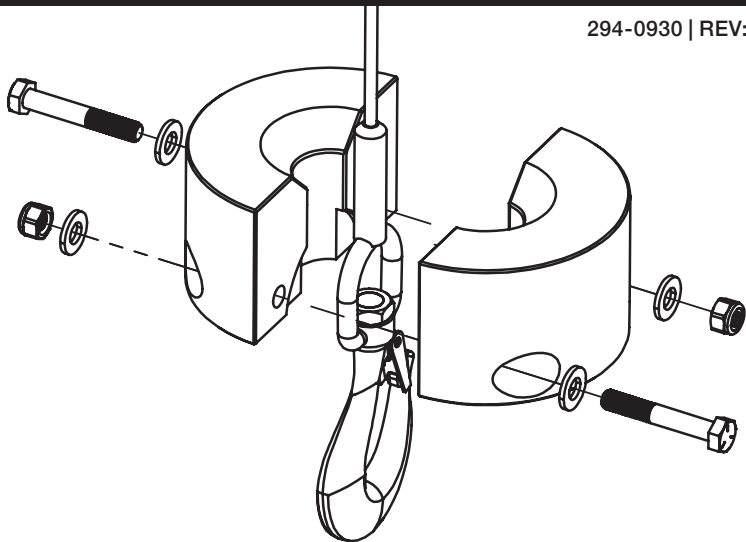**CAUTION**


- Ensure the swivel eye is captured by the cutout in headache ball halves.
- Ensure the synthetic rope is not pinched between mating halves.



OZHB10, OZHB10-SS

HEADACHE BALL FOR WIRE ROPE INSTALLATION

TOOLS NEEDED:

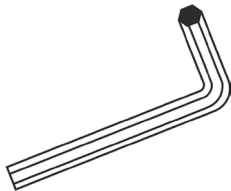

5/16" Allen Key

HARDWARE:



5/8" -11x1 Nylon
Set Screw

1. Route cable through headache ball down to hook end.

2. Secure headache ball in place by tightening set screw against cable.

CAUTION

Ensure bottom of headache ball is above and not touching cable sleeve and thimble.

